



Operating Instructions

1. Make sure nobody is near the rear cover/top when you begin raising or lowering it. There are many pinch points.
2. Remove the “Tie Down Straps” from the rear corners of The Liberator.
3. Raise the rear portion of the cover with the key fob controller to a comfortable height to unzip the front portion of the cover. As shown



4. Climb aboard your pontoon boat and unzip the front portion of the cover and store under a seat.
5. Raise the rear cover/top to your desired height and take a ride.
6. There is a toggle switch located near the rear of your boat in case you loose the key fob.

Maintenance

The only maintenance require is a small smear of white grease in the rear hinge area.



Trailing & High Winds

When trailering or during times of high winds your Liberator needs to be strapped in the rear corners and on the sides with the provided straps..

